

## WX 3200 ES [CONN]



Pramac portable generators range: prompt power assistance to light up, tackle site jobs and property improvement works. A complete range to choose from, for best solution to your remote power needs. When not fixing up around the job site, your Pramac portable generator can be used for emergency power during a power outage.

### FEATURES

- OHV engine provides consistent power for multiple applications
- Fuel: Petrol
- Starting Systems: Electric (with battery)
- Low-oil level shutdown automatically safeguards engine from damage
- Engine oil for the first startup supplied in a bottle
- Digital multi meter tracks engine runtime for maintenance intervals
- Fuel gauge allows user to track gasoline levels
- Practical quick user's Starting Instruction (decals)
- AVR Automatic Voltage Regulator
- Kit wheels integrated for easy transportation
- CONNector for AMF
- Optional: Automatic Main Failure (AMF)



### Osiągi

Częstotliwość	Hz	50
Napięcie	V	230
Liczba faz		1
Moc maksymalna	Watts	2850
Moc ciągła	Watts	2450



## Silnika

Marka		Pramac
Typ		OHV
Zoptymalizowana emisja spalin wg 97/68 50Hz (COM)		Stage V
Obroty znamionowe	rpm	3000
Paliwo		Benzyna
System rozruchu		Elektryczny (+Ręczny)
Pojemność układu smarowania	l	0.6
Czujnik braku oleju		√




## Alternatora

Regulacja napięcia		AVR
--------------------	--	-----

## Dane wymiarowe

Długość	(L) mm	680
Szerokość	(W) mm	602
Wysokość	(H) mm	523
Waga (suchy)	Kg	49
Wymiary kartonu DxSxW	mm	685x505x520

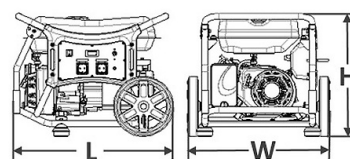

## Czas pracy

Pojemność zbiornika paliwa		17
Zużycie paliwa @ 50%	l/h	1.04
Czas pracy przy 50%	h	16.3



## Poziom hałasu

Gwarantowany poziom hałasu (LWA)	dBA	93
Poziom ciśnienia akustycznego z 7 m	dB(A)	65

## GENSET CONTROL PANELS

Mounted on the genset and complete of: instrumentation, control, protection of the generating set and sockets.

### COMMANDS

- Start selector switch with key: OFF - ON - START
- Selector switch for external control connector (AMF)
- Choke Lever

### INSTRUMENTATION

- Voltmeter
- Frequency meter
- Hourmeter
- Fuel gauge

### PROTECTIONS

- Thermal Magnetic protection
- Oil Guard

### OUTLET:

- CONNector for AMF

### GNIAZDA

SCHUKO 230V 16A IP44		2
----------------------	--	---



## ACCESSORIES CONTROL PANEL

### ATS - Automatic Transfer Switch

With the Powermate Automatic Transfer Switch, you can easily connect your generator to the power grid and continue to supply your domestic appliances in case of a power outage.

#### Equipment:

- Control unit
- Contactor with interblock
- Selector Switch: AUTO / MANUAL  
Manual option it is used to decouple the machine from the generator.  
The generator can start independently from the panel.
- Emergency Botton: Stop the generator once pressed.
- Battery charged
- 8 meters control wiring (with connector)



#### Status indicators:

- Utility Power lamp: Detects the external grid.
- Generator lamp: The load switch to the generator the warning light turns on.
- Load lamp: ATS is powered by the load,  
it comes from the grid or from the generator.
- Battery lamp: It keeps charged the generator starter Battery,  
so it is always ready to go.
- Failure lamp: Indication of anomalies. The generator fails to start.

It is strongly recommended that your ATS need to be installed by a professional.

#### DIMENSIONS PANEL

Szerokość	(W) mm	410
Wysokość	(H) mm	310
Głębokość	(D) mm	180
Waga	Kg	7

